






STAND COMPONENTS

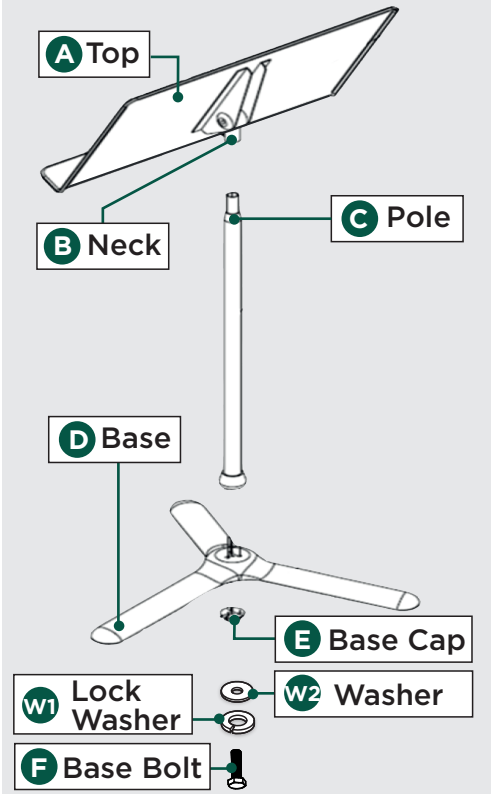


TOOLS NEEDED

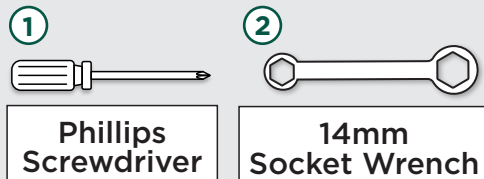


- 1** Remove Base Bolt **F**, Washers **W1** **W2**, and Base Cap **E** from bottom of Pole **C**.

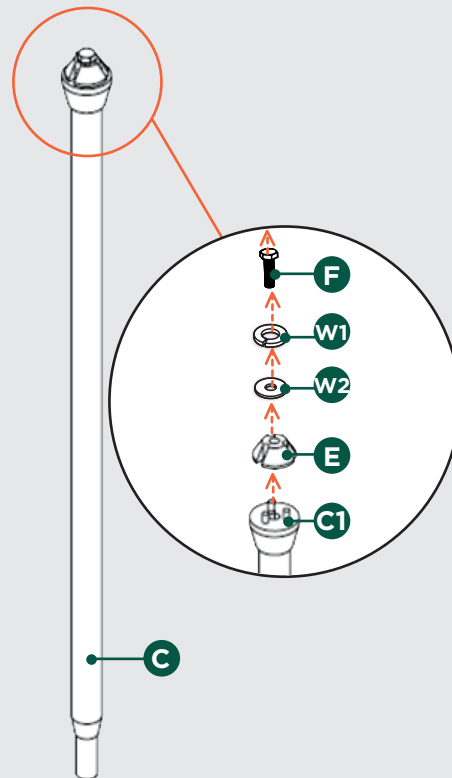


- 2** Insert Pole Protrusions **C1** into Base **D** holes and place Base Cap **E** over Protrusions. Insert Bolt **F**/Washers **W1** **W2**, and tighten using a Socket Wrench **2**.

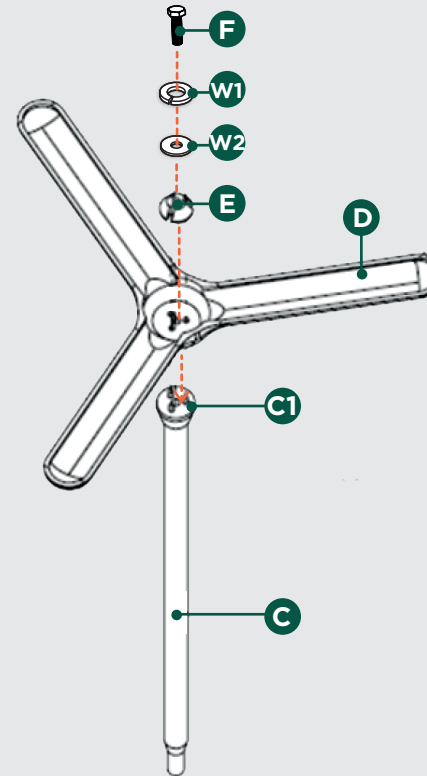

- 3** Extend Chrome Tube **C** and insert into Neck **B**.

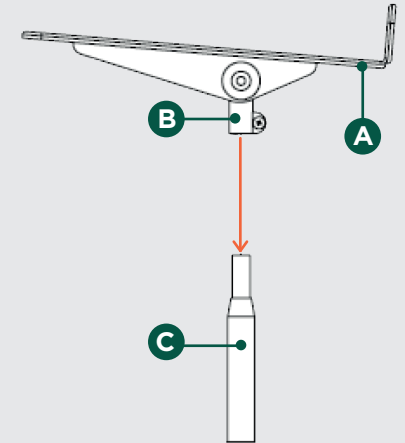

Tighten Neck Screw with Phillips Screwdriver **1**.

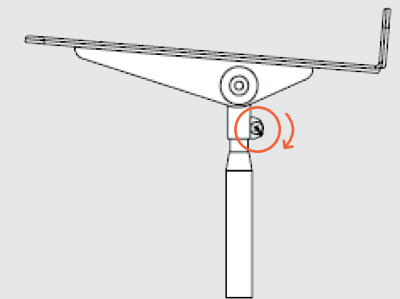

Double check all Bolts and Screws to be tightened securely before use. Check all Bolts and Screws periodically. Failure to completely tighten the Bolts and Screws may result in tipping and possible injury!

Congratulations, your MUSIC STAND is now assembled and ready to be used!

Dear Customer, Thank you for your purchase. Although extreme care goes into manufacturing & packaging of this product, mistakes are possible. If you encounter any missing parts or difficulty in assembly, please contact our customer service Toll Free at 1-800-261-4112 or info@nationalpublicseating.com for courteous & immediate resolution to your problem.