



COMPONENTS

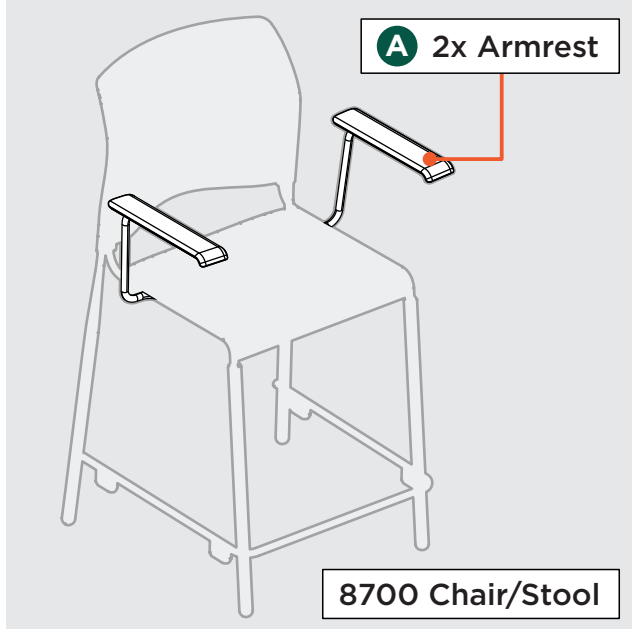


INCLUDED HARDWARE

①



4x Bolt

INCLUDED TOOLS

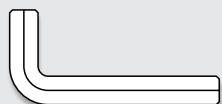


Allen Key


ASSEMBLY INSTRUCTIONS 8700-A | 8700 Series Armrests

- 1 Turn the chair/stool upside down on a flat surface. Using the included Allen key, remove the four screws from the underside of the chair/stool.

Note: These screws will not be used to install the armrests.

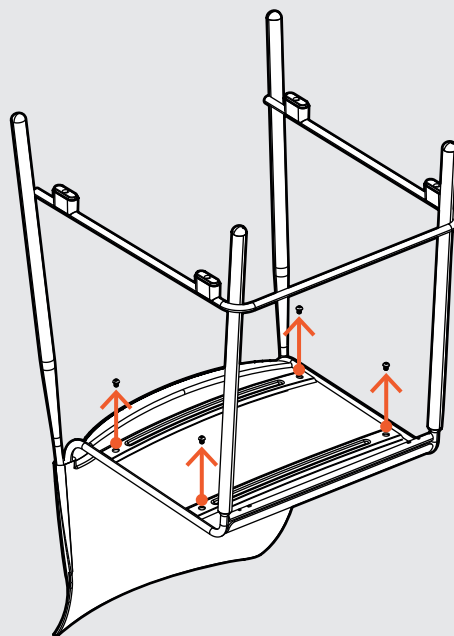

- 2 Place one Armrest **A** over the underside of the chair/stool, making sure to align the holes with the holes in the frame and cushion. Using the included Allen key fasten 2 x Bolt **①** to secure the armrest to the chair/stool. Repeat on the other side.

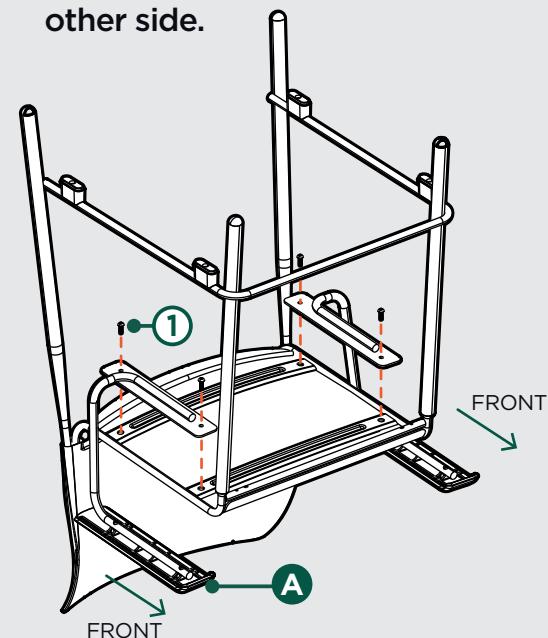

⚠ Double check all bolts to be tightened securely before use. Check all bolts periodically. Failure to completely tighten the screws may result in tipping and possible injury!

Congratulations, your 8700 Series Armrests are now assembled and ready to be used!

Dear Customer, Thank you for your purchase. Although extreme care goes into manufacturing & packaging of this product, mistakes are possible. If you encounter any missing parts or difficulty in assembly, please contact our customer service Toll Free at **1-800-261-4112** or **info@nationalpublicseating.com** for courteous & immediate resolution to your problem.